


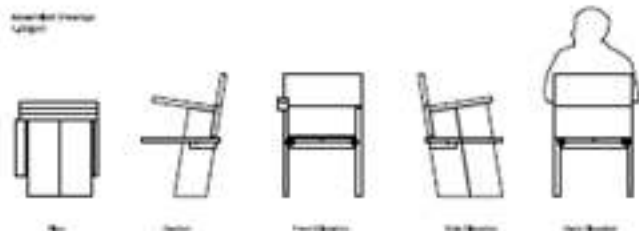




Assembly Overview  
Upper



Assembly Overview  
Lower

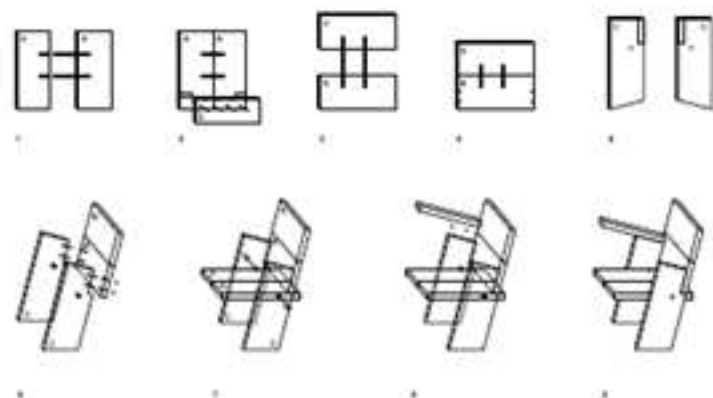

1	2	3	4	5	6	7	8	9	10
---	---	---	---	---	---	---	---	---	----

11	12	13	14	15	16	17	18	19	20
----	----	----	----	----	----	----	----	----	----

21	22	23	24	25	26	27	28	29	30
----	----	----	----	----	----	----	----	----	----

31	32	33	34	35	36	37	38	39	40
----	----	----	----	----	----	----	----	----	----

## MAKE A STOOL THAT LASTS FOREVER IN NINE EASY STEPS!

4x

**1** Cut 4 pieces of 120cm x 60cm PEX film 40mm x 40mm squares.  
Cut a 120cm wide slot halfway down the centre of each square.

**2** Using screws at the top and bottom of each side join the four squares together to create an open box.

**3** Line the bottom of the box with a decorative texture that will become the top of your stool. Suggestions include fabric, bubble wrap, tulle or wool.

**4** In a bucket mix around 2 parts of aggregate to one part cement. Fold enough fabric to make a rim wide about the same as the width of the aggregate. Place one cutting edge back to the bottom of the bucket.

**5** Empty the mixture into the bucket and line the sides to make sure the mixture fills out all the gaps in the front and all outside the so the surface looks well dry to touch (20 minutes).

**6** Here's a stool!

**7** Invert the side of the formwork to release your stool seat!

**8** Join together the sides of the formwork box to create the base for your legs to attach. Place your legs back into the base.

**9** Enjoy your new stool!

Image courtesy of Sugarhouse Studios

These instructions were created by A21WBLT as part of their 'Make, Don't Make Do!' project based at Sugarhouse Studios. For more information please visit <http://www.sugarhousestudios.co.uk>





